

CONTENTS

INTRODUCTION

1

INSTALLATION

3

STANDALONE MODE

5

WIEGAND READER MODE

13

CONTROLLER MODE

12

ADVANCED APPLICATION

14

INTRODUCTION

The device is a single door multifunction standalone access controller or Wiegand output reader. It uses Atmel MCU assuring stable performance. The operation is very user-friendly, and low-power circuit makes it long service life.

The device can be made with WIFI version.

Features

- > Metal case, anti-vandal
- > Waterproof, conforms to IP67
- > PIN length: 4-6 digits
- > EM+HID+Mifare cards
- > With Wiegand input & output
- > Can be used as Wiegand reader with LED & buzzer output
- > Card block enrollment
- > Tri-color LED status display
- > Integrated alarm & buzzer output
- > Pulse mode, Toggle mode
- > User data can be transferred
- > 2 devices can be interlocked for 2 doors
- > Built-in light dependent resistor (LDR) for anti tamper

Specifications

User Capacity	10000
Common Card/PIN User	9998
Panic User	2
Visitor User	10

Operating Voltage	12~80V DC/12~55V AC
Working Current	≤150mA
Idle Current	≤60mA

Proximity Card Reader	EM+HID+Mifare
Radio Technology	125KHz ±13.56MHz
Range	1~4 cm

PIN Length	4~6 digits
------------	------------

Wiring Connections	Relay Output, Exit Button, Alarm, Door Contact, Wiegand Input, Wiegand Output
--------------------	---

Relay

Adjustable Relay Output Time	One (NO, NC, Common)
Lock Output Load	0~99 Seconds (5 seconds default) 1 Amp/30W Maximum

Wiegand Input

Automatic detection
EM card: Wiegand 26~44bits output.
(Factory default: Wiegand 26bits)
Mifare card: Wiegand 26~44bits, 56/58bits output (Factory default: Wiegand 34bits)
HID card: Output automatically
4 bits, 8 bits(ASCII), 10 digits Virtual Number (Factory Default: 4 bits)

Environment

Meets IP67
-40°C ~ 60°C (-40°F ~ 140°F)
0%RH~98%RH

Physical

Coulor: Silver & Black
Dimensions: L120 x W70 x H22mm (Wide)
L144 x W55 x H21mm (Slim)
Unit Weight: 500g
Shipping Weight: 605g

Carton Inventory

INSTALLATION

- > Remove the back cover from the unit
- > Drill 2 holes(A,C) on the wall for the screws and one hole for the cable
- > Knock the supplied rubber bungs to the screw holes(A,C)
- > Fix the back cover firmly on the wall with 4 flat head screws
- > Thread the cable through the cable hole(B)
- > Attach the unit to the back cover

Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	—
Enter info programming mode	Red light shines	One beep
In the programming mode	Orange light bright	One beep
Operation error	—	Three beeps
Exit from the Programming mode	Red light bright	One beep
Open lock	Green light bright	One beep
Alarm	Red light Shines quickly	Beeps

Basic Configure

Enter and Exit Program Mode

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code) #
Exit Program Mode	*

Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) #
3. Exit Program Mode	*

Set the Working Mode

Notes: The device has 3 working modes: Standalone Mode, Controller Mode, Wiegand Reader Mode, choose the mode you use. (Factory default is Standalone Mode / Controller Mode)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Standalone/Controller Mode	7 7 # (Factory default)
3. Wiegand Reader Mode	7 8 #
3. Exit	*

STANDALONE MODE

The device can work as Standalone Access Control for single door.
(Factory default mode) --- 7 7 #

Connection Diagram

Common Power Supply

Access Control Power Supply

Programming

Programming will be very depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- > **User ID number:** Assign a user ID to the access card/ PIN in order to track it.
- > **User ID number:** The Common Card/PIN User ID: 1~9998
- Panic User ID: 9999~9999
- Visitor User ID: 9991~10000

IMPORTANT: User IDs do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.

- > **Proximity Card:** 125KHz EM, 125KHz HID, 13.56MHz Mifare cards
- > **PIN:** Can be any 4~6 digits.

Add Common Users

(PIN/ Card user ID: 1~9998; PIN length: 4~6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #

Add Card User

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Using Auto ID	1 (Read Card) / (Input 8/10/17 Digits Card Number) #	
OR	2. Select Specific ID (Allows Master to define a specific User ID to associate the card to)	1 (User ID) # (Read Card) / (Input 8/10/17 Digits Card Number) #
OR	2. Add Card: Block Enrollment (Allows Master to add up to 200 cards to the Reader in a single step) Takes 2 minutes to program.	1 (User ID) # (Card Quantity) # (The First Card 8/10/17 Digits Number) #

Add PIN User

2. Select Specific ID (Allows manager to define a specific User ID to associate the PIN to)	1 (User ID) # (PIN) #
3. Exit	*

Tips for PIN Security (Only valid for 6 digits PIN):

For higher security we allow you to hide your correct PIN with other numbers up to a max of 10 digits.

Example PIN: 123434
You could use *(123434) ** or *(123434) (** can be any numbers from 0~9)

Add Panic Users (Valid for Card/ PIN Users)

(User ID number is 9989,9990 PIN length: 4~6 digits)

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Add Card	1 (User ID) # (Read Card / Input 8/10 /17 Digits Card number) #	
OR	2. Add PIN	1 (User ID) # (PIN) #
3. Exit	*	

Add Visitor Users (Valid for Card/ PIN Users)

(User ID number is 9991~10000 PIN length: 4~6 digits)
There are 10 groups Visitor PIN/card available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PIN/card become invalid automatically.

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Add Card	1 (User ID) # (0~9) # (Read Card) / (Input 8/10/17 Digits Card Number) #	
OR	2. Add PIN	1 (User ID) # (0~9) # (PIN) #
3. Exit	*	

Delete Users

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Delete Card – By Card	2 (Read Card) #	
OR	2. Delete Card – By ID number	1 The cards can be deleted continuously.
OR	2. Delete User – By Card number	2 (Input 8/10/17 digits Card number) #
2. Delete PIN User - Common	2 (Input PIN) #	
2. Delete PIN – By PIN	2 (User ID) #	
2. Delete PIN – By ID number	2 (User ID) #	
Delete Panic User	2 (Master Code) #	
Delete ALL Users	2 (Master Code) #	
3. Exit	*	

Set Relay Configuration

The relay configuration sets the behaviour of the output relay on activation.

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Pulse Mode	3 (1~99) # (factory default)	
OR	3. Strike-Out ON	61 # Access will be denied for 10 minutes (Exit button is still workable)
OR	2. Toggle Mode	62 #
3. Exit	*	

Set Access Mode

For Multi User access mode, the interval time of reading can not exceed 5 seconds, or else, the device will exit to standby automatically.

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Card Access	4 0 #	
OR	2. PIN Access	4 1 #
OR	2. Card or PIN Access	4 3 # (factory default)
OR	2. Multi User Access	4 3 (2~9) # (Only after 2~9 valid users, the door be opened)
3. Exit	*	

Set Strike-out Alarm

The strike-out alarm will engage after 10 failed entry attempts (Factory is OFF). It can be set to deny access for 10 minutes after engaging or disengage only after entering a valid card/ PIN or Master code/card.

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Strike-Out OFF	6 0 # (factory default)	
OR	2. Strike-Out ON	61 # Access will be denied for 10 minutes (Exit button is still workable)
OR	2. Strike-Out ON (Alarm)	62 #
Set Alarm Time	5 (0 ~ 3) # (factory default is 1 minute)	
Enter Master Code # or Master Card or valid user card / PIN to silence		
3. Exit	*	

Set Door Open Detection

Door Open Too Long (DOTL) Detection
When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door. The beep can be stopped by doing the door, master users or valid users, or else, it will continue to keep the same time with the alarm time set.

20260518_V2

- 01 -

20260518_V2

- 02 -

20260518_V2

- 03 -

20260518_V2

- 04 -

20260518_V2

- 05 -

20260518_V2

- 06 -

20260518_V2

- 07 -

20260518_V2

- 08 -

20260518_V2

- 09 -

Simplified Instruction

Operation

Function Description

Operation

Enter the Programming Mode

* - Master Code - #
then you can do the programming (123456 is the factory default master code)

Change the Master Code

0 - New Code - # - Repeat the New Code - #
(code: 6 digits)

Add Card User

1 - Read Card - #
(can add cards continuously)

Add PIN User

1 (User ID) - PIN - #
(The PIN is any 4~6 digits)

Delete User

2-Read Card-#
2-User ID-#

Exit from the Programming Mode

*

How to release the door

Card User Read Card

PIN User Input PIN #

Door Forced Open Detection

When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened by force, the inside buzzer and external alarm (if there is) will both operate, they can be stopped by master users or valid users, or else, it will continue to sound the same time with the alarm time set.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Door Open Detection	6 3 # (factory default)
OR	6 4 #
2. Enable Door Open Detection	5 (0 ~ 3) # (factory default is 1 minute)
3. Exit	*

The function of Set Alarm Time also apply for anti-tamper alarm

Set Audible and Visual Response

Programming Step	Keystroke Combination	
1. Enter Program Mode	* (Master Code) #	
2. Disable Sound	7 0 #	
Enable Sound	7 1 # (factory default)	
OR	2. LED Always OFF	7 2 #
LED Always ON	7 3 # (factory default)	
OR	2. Keypad Backlit Always OFF	7 4 #
Keypad Backlit Always ON	7 5 #	
2. Keypad Backlit Automatic OFF	7 6 # (factory default)	
Keypad Backlit Automatic ON	7 7 #	
3. Exit	*	

Master Card Usage

Using Master Card to add and delete users

Add Card/ PIN Users	1. Input (Master Card) 2. Input (Card) or (User ID # PIN #) Repeat step 2 for additional users 3. Input (Master Card) again
Delete Card/ PIN Users	1. Input (Master Card Twice within 5s) 2. Input (Card) or (User ID #) Repeat step 2 for additional users 3. Input (Master Card) again

Users Operation & Reset to Factory Default

- > **Open the door:** Read user card or input valid user PIN #
- > **Remove Alarm:** Enter Master Code # or Master Card or valid user card / PIN
- > **To reset to factory default & Add Master Card:** Power off, press the Exit Button, hold it and power on, there will be two beeps, then release the exit button, the LED light turns into yellow, then read any 125KHz EM/HID/13.56MHz Mifare card, the LED will turn into red, means reset to factory default successfully. Of the card reading, it is the Master Card.

Remarks:

- ① If no Master Card added, must press the Exit Button for at least 5 seconds before release, (this will make the previous registered Master Card invalid)
- ② Reset to factory default, the user's information is still retained.

CONTROLLER MODE

The device can work as Controller, connected with the external Wiegand reader.
(Factory default mode) --- 7 7 #

Connection Diagram

Wiegand Input Formats

The controller will automatically detect the Wiegand format of the external card reader.

Programming

- > **Basic Programming is the same as Standalone Mode**
- > **There are some exceptions for your attention:**
- The device Connected with External Card Reader
- Users can be added/deleted on either the device or external reader.

The device Connected with Keypad Reader

The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format. Choose the below operation according to the PIN output format of your reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. PIN input bits	8 (4 or 8 or 10) # (factory default is 4 bits)
3. Exit	*

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.

- > **Add PIN Users:** To add PIN users, after enter into programming mode on the device, PIN(s) can be input/ added on either the device or the external Keypad Reader.
- > **Delete PIN Users:** the same way as add users.

WIEGAND READER MODE

The device can work as Standard Wiegand Reader, connected to the third party Controller --- 7 8 #

Connection Diagram

Notes:

- > When set into Wiegand Reader mode, nearly all settings in Controller Mode will become invalid, and Brown & Yellow wires will be redefined as below:
 - Brown wire: Green LED light control
 - Yellow wire: Buzzer control
- > If you need to connect Brown/Yellow wires: When the input voltage for LED is low, the LED will turn into Green; and when the input voltage for Buzzer is low, it will sound.

Set Wiegand Output Formats

Please set the Wiegand output formats of Reader according to the Wiegand input formats of the Controller.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand output bits	For EM Card: 8 (26~ 44) # (factory default is 26bits) For Mifare Card: 8 0 (26~44, 56, 58) # (factory default is 34bits) For HID Card: Output automatically 8 (4 or 8 or 10) # (factory default is 4 bits)
3. Disable Parity Bit	8 0 #
Enable Parity Bit	8 1 # (factory default)
4. Exit	*

PIN output bits

3. Disable Parity Bit	8 0 #
Enable Parity Bit	8 1 # (factory default)
4. Exit	*

User Information Transfer

The device supports the User Information Transfer function, and the enrolled user (cards, PINs) can be transferred from one (let's name it Master Unit) to another (let's name it Accept Unit).

Connection Diagram:

Remarks:

- > The Master units and Accept units must be same series devices.
- > The Master Code of the Master Unit and the Accept Unit must be set to the same.
- > Program the transfer operation on Master Unit only.
- > If the Accept Unit is already with the users enrolled, it will be covered after transferring.
- > For full users enrolled, the transfer takes about 30 seconds.

Set Transferring on Master Unit:

Programming Step	Keystroke Combination
1. Enter the programming mode	* (Master Code) #
2. Set transferring	9 8 #
Within 30 seconds, Green LED shines, after one beep, the LED will turn into Red, which means the users' information has been transferred successfully.	
3. Exit	*

Interlock

The device supports the Interlock Function. It is of two Devices for two doors, and mainly used for banks, prisons, and other places where a higher level security is required.

Connection Diagram:

Remarks: The Door Contact must be installed and connected as the diagram. Let's name the two Devices as "A" and "B" for two doors "1" and "2"

Step 1: Enroll the users on Device A, then transfer the users' information to Device B by "User Information Transfer" function.

Step 2: Set both of the two Devices (A and B) to Interlock function

Outdoor Access Control

(Standalone/ Controller/ Reader)

Wide

Slim

User Manual